



Instruction guide for DV 10 DVD Projector

To play a DVD:

- (1) Plug in projector and wait for flashing blue “ready” light.
- (2) Press flashing blue power button and wait 30 seconds for “standby” screen.
- (3) Open DVD cover on top and insert DVD; DVD will automatically root to main menu.
- (4) Use controls on top left of projector, or remote control.
- (5) To shut down, press solid blue light twice, then allow fans 1 minute to cool down (you will hear the fan stop running).
- (6) Eject DVD, unplug projector, and return to carry case

To Play a VHS:

- (1) Plug in projector and wait for flashing blue “ready” light.
- (2) Press flashing blue power button and wait 30 seconds for “standby” screen.
- (3) Connect yellow/red/white cable from video/audio “out” of VCR to video/audio “in” on back of projector.
- (4) Plug in and turn on VHS. Play tape
- (5) Press “</source” button and allow projector to scroll through the inputs and “find” the composite signal.
- (6) To shut down, press solid blue light twice, then allow fans 1 minute to cool down (you will hear the fan stop running).
- (7) Eject VHS tape, disconnect VCR, unplug projector, and return to carry case.