General guide for setting up & operating the Canon FS11 Flash Memory camcorder



• Unpack camcorder, power cable (or batteries), and tripod. Open tripod legs, and place on consistent, even ground, for safety.







• Loosen all fasteners and raise legs to a chest level height. Secure camcorder to tripod and tighten lock screw.







• Plug in power cord to electrical outlet or open the battery compartment cover, then slide in the battery until you hear a click. Close the cover.







• Open the LCD view screen. Press the "ON/OFF" button on top of camera to power up the camcorder.







• Rotate the mode selector to "Wideo Record". Slide "W-T" (wide-tele) lever to zoom in on, or zoom out of, your target location.







• Press the START/STOP button at the back of camera to record. The LCD screen will show a red dot in the upper right corner to indicate that you are recording.







• Press the START/STOP button at the back of camera to stop recording. Rotate mode selector to Play Video" position to review your recordings.







• At event's end unplug camcorder, breakdown tripod, and return all parts to carry cases.








• To transfer recordings, connect the camera to a computer via the USB port, plug in the power adapter and rotate mode selector to "Play Video". Press the ON/OFF button, and when prompted, choose "PC/PRINTER" using the joystick. Press "SET" to confirm.








• Copy your files directly to your computer. In Windows, they can be viewed using VLC Media Player. On a Macintosh, Import your files using iMovie.

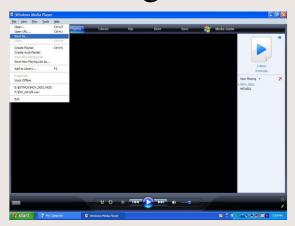

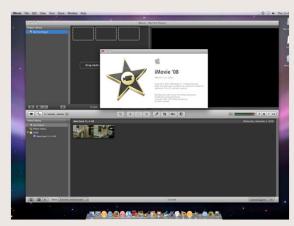



• Please remember that this is a GENERAL help guide, as there are many variables when dealing with presentation equipment. Please contact our main office at (631) 632-9400 for further assistance.



